



Tensor-I22 PXE boot configuration


1. Make sure you connect the network cable to a port located near the miniDP display port.

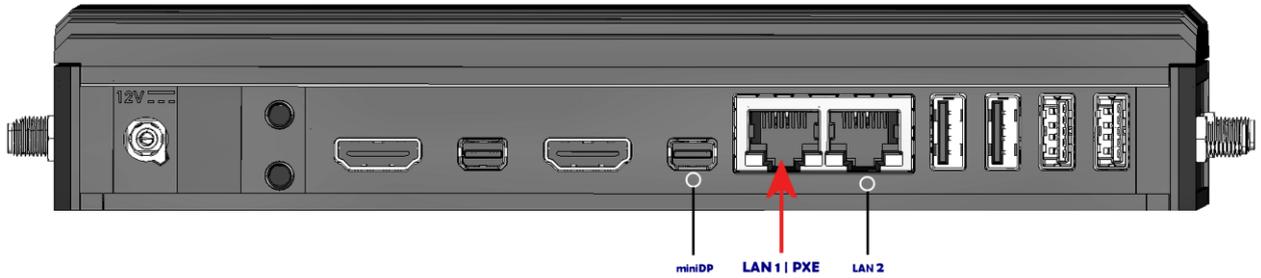

2. Enter to the BIOS menu by pressing the DEL key during the boot
3. Browse to Advanced | Network Stack Configuration

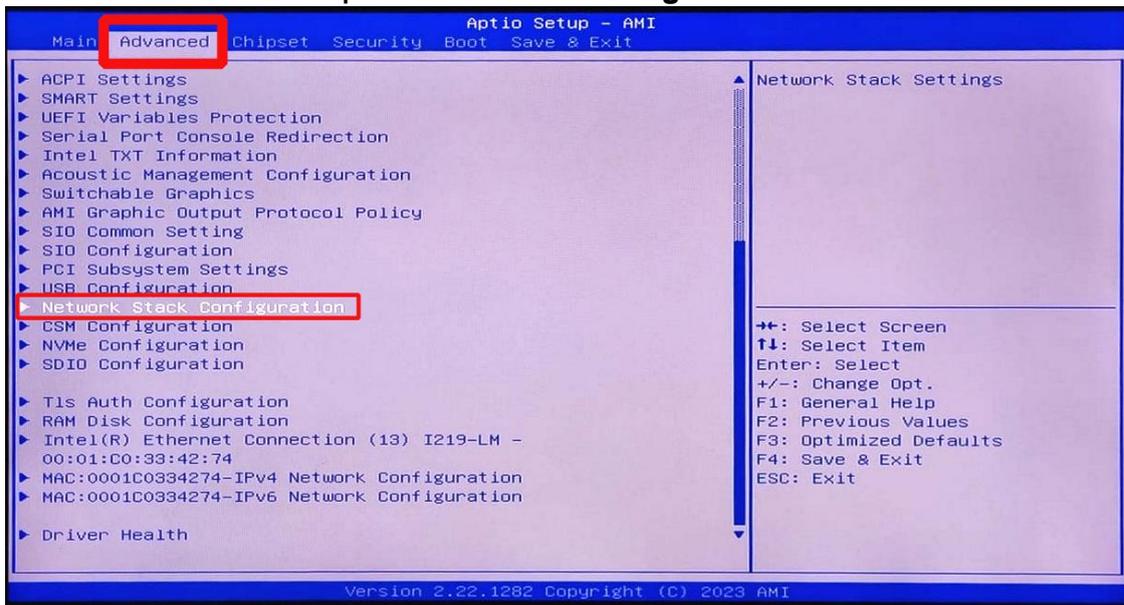

4. Enable Network Stack and IPv4 PXE Support

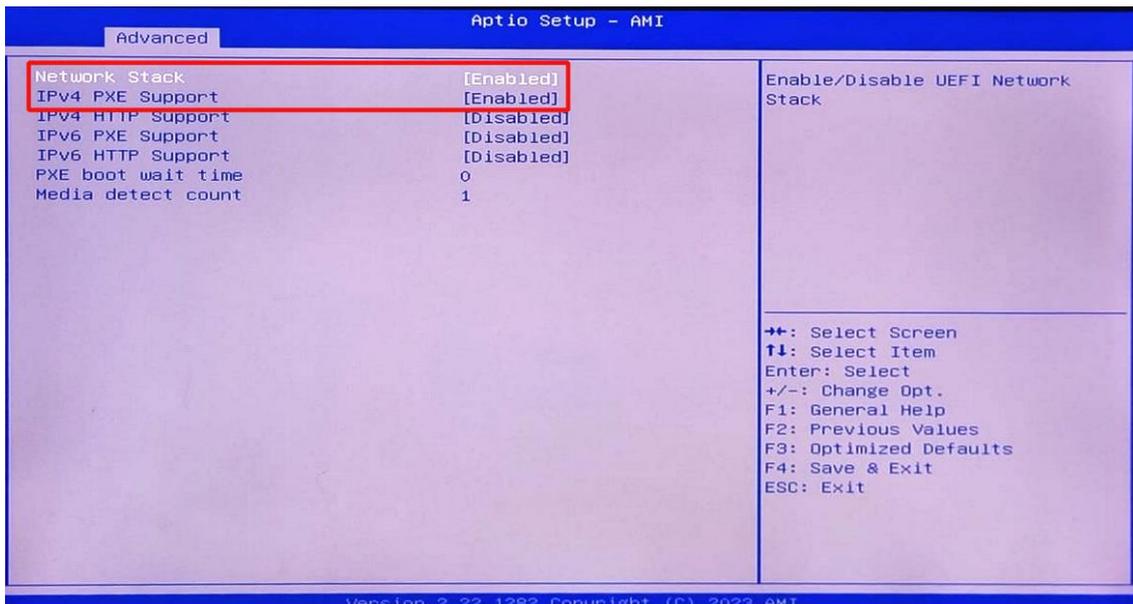

5. Press the F4 key to Save & Exit