

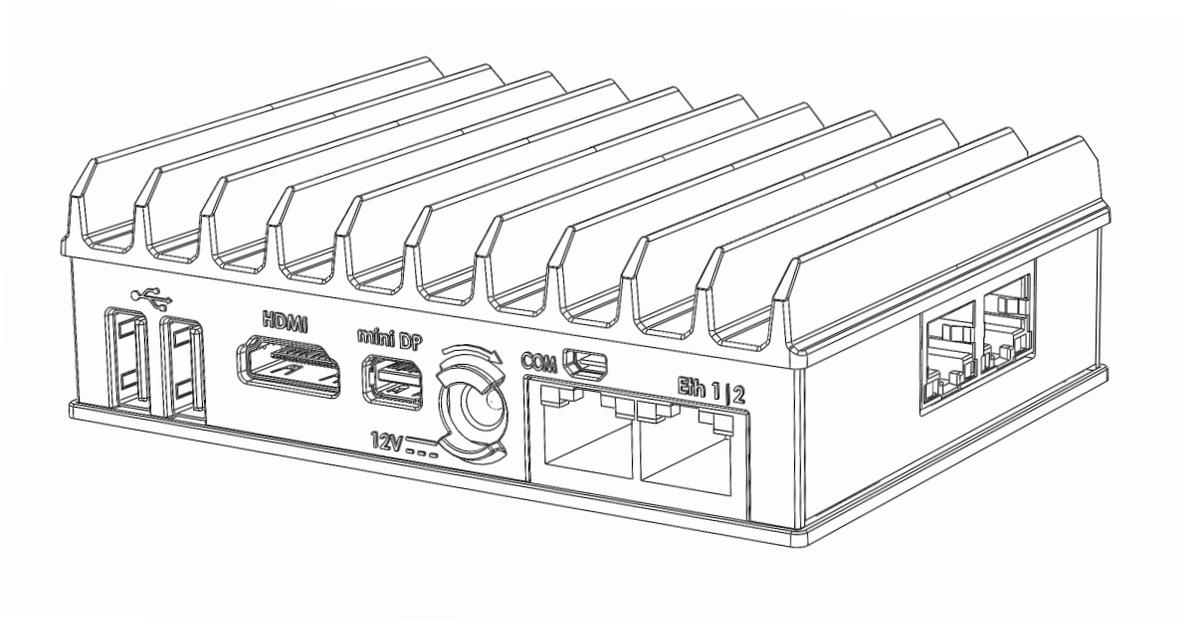


# fitlet2 FC-M2LAN installation instructions


## Package Content

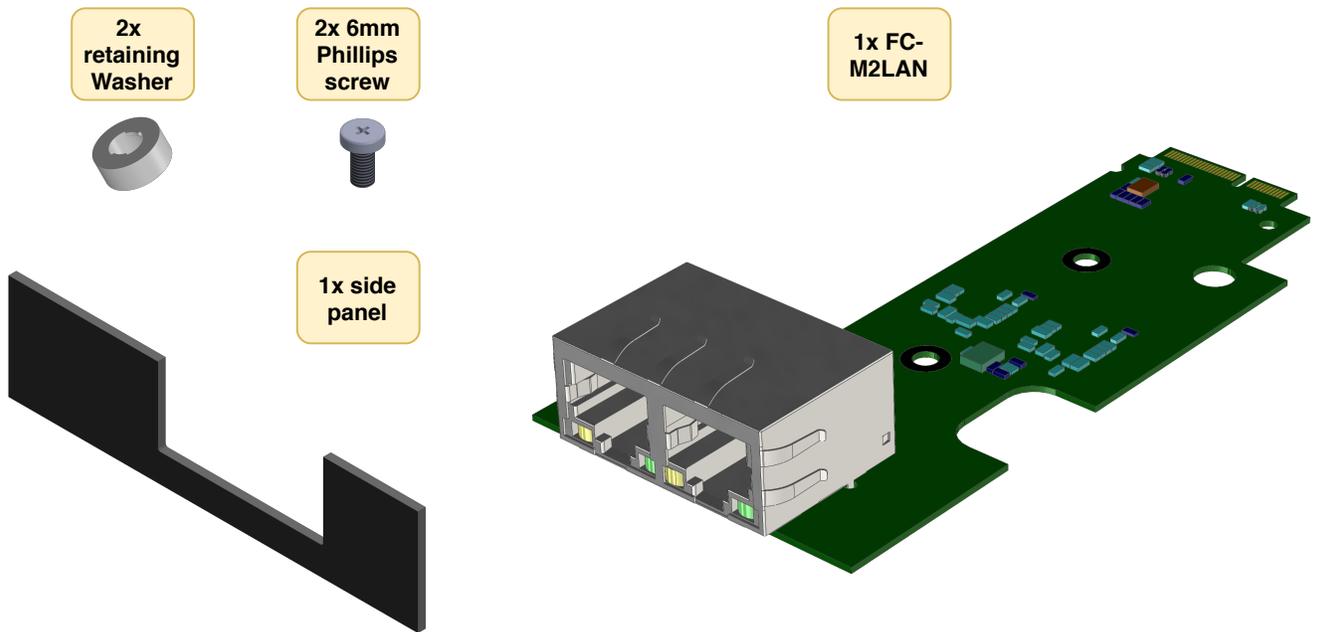

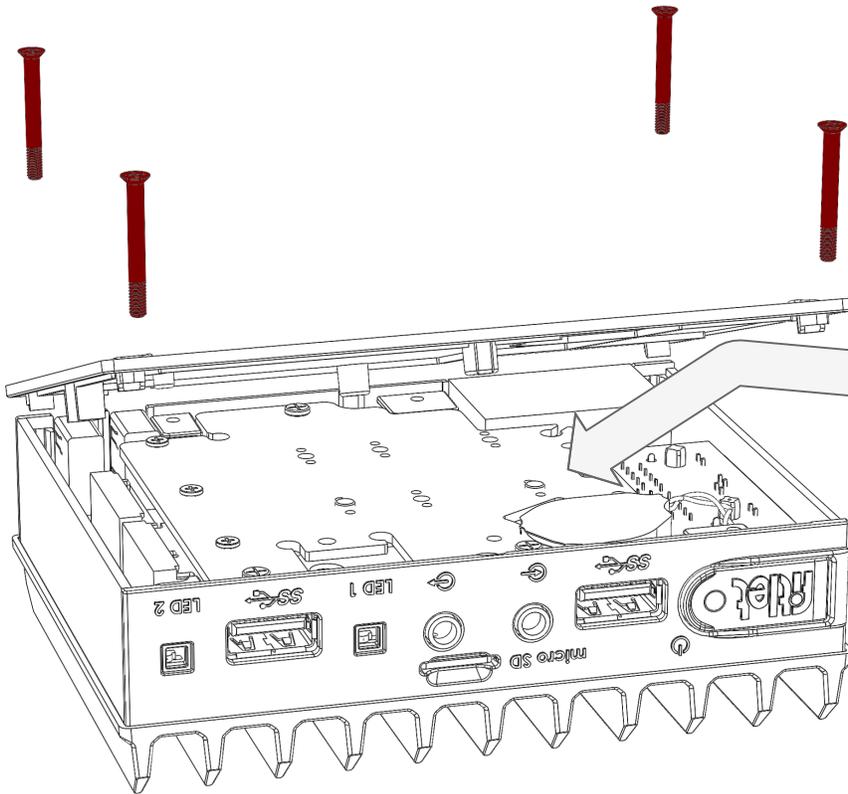

1

Remove the bottom cover by unscrewing the 4x Phillips chassis screws and pull out the cooling plate gently after removing the 3x Phillips screws.

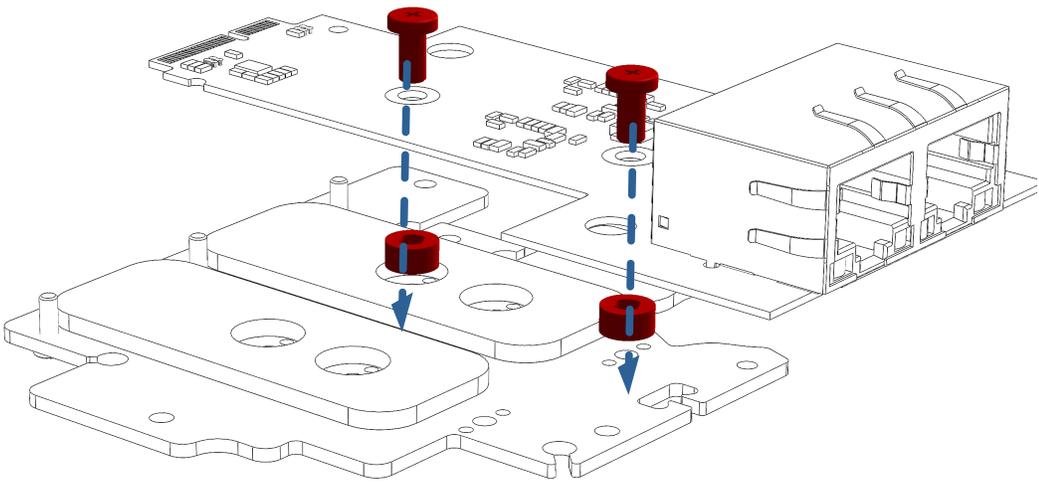


2

Place the retaining washers at the designated location on the cooling plate and seat the FC-M2LAN on-top of them. Then fasten the 2x Phillips screws

!

The cooling plate should be supplied with the product's packaging or already assembled.

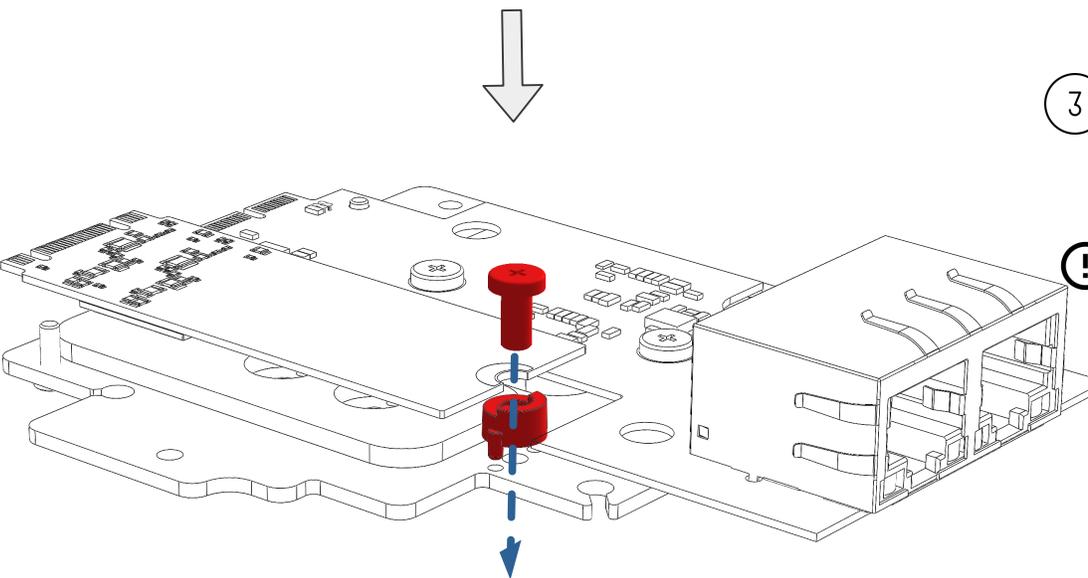


3

Place the red module spacer in the designated location then place the M.2 SSD (chips facing the thermal pad), then fasten using the 1x Phillips screw


!

The red module spacer should be supplied with the product's packaging or already assembled

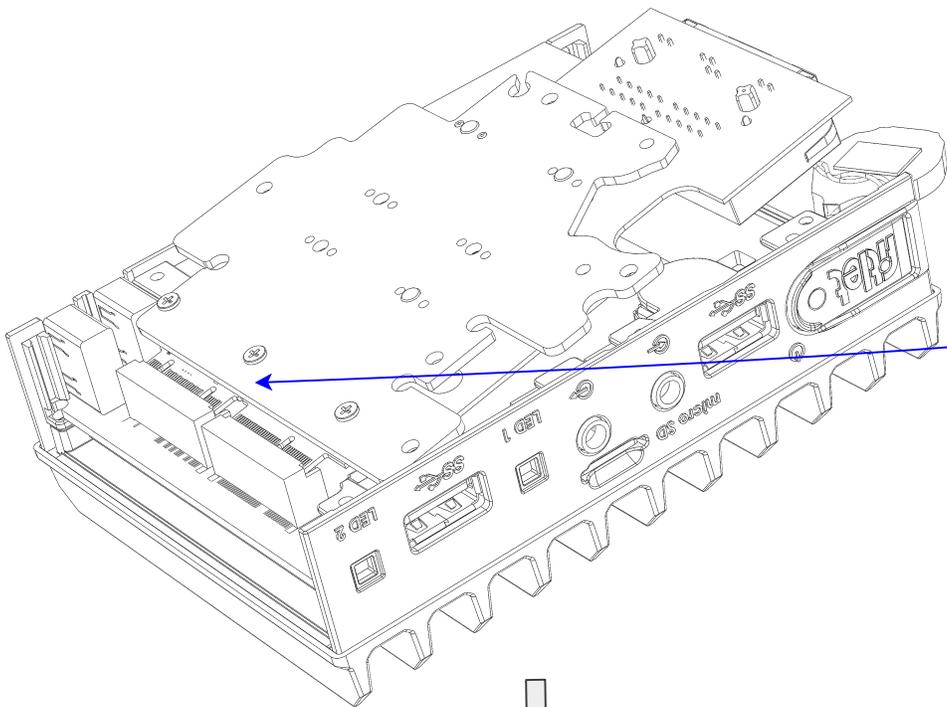

4

Assemble the cooling plate onto the M.2 connectors

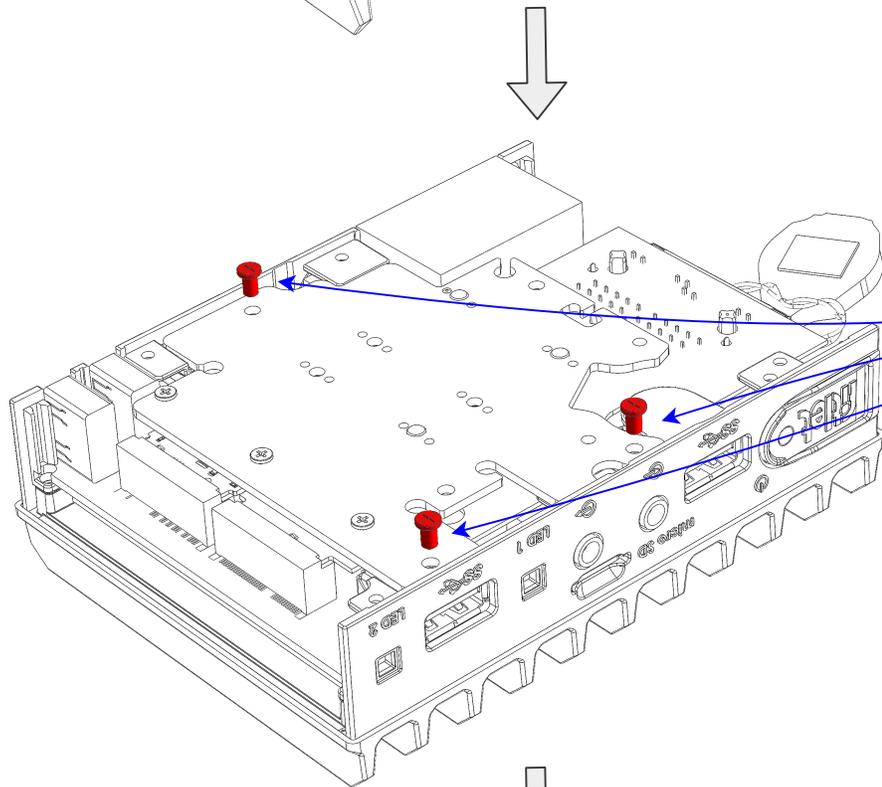


5

Fasten the cooling plate in place assembling the 3x Phillips screws.




The 3x Phillips screws supplied with the product's packaging or already assembled.


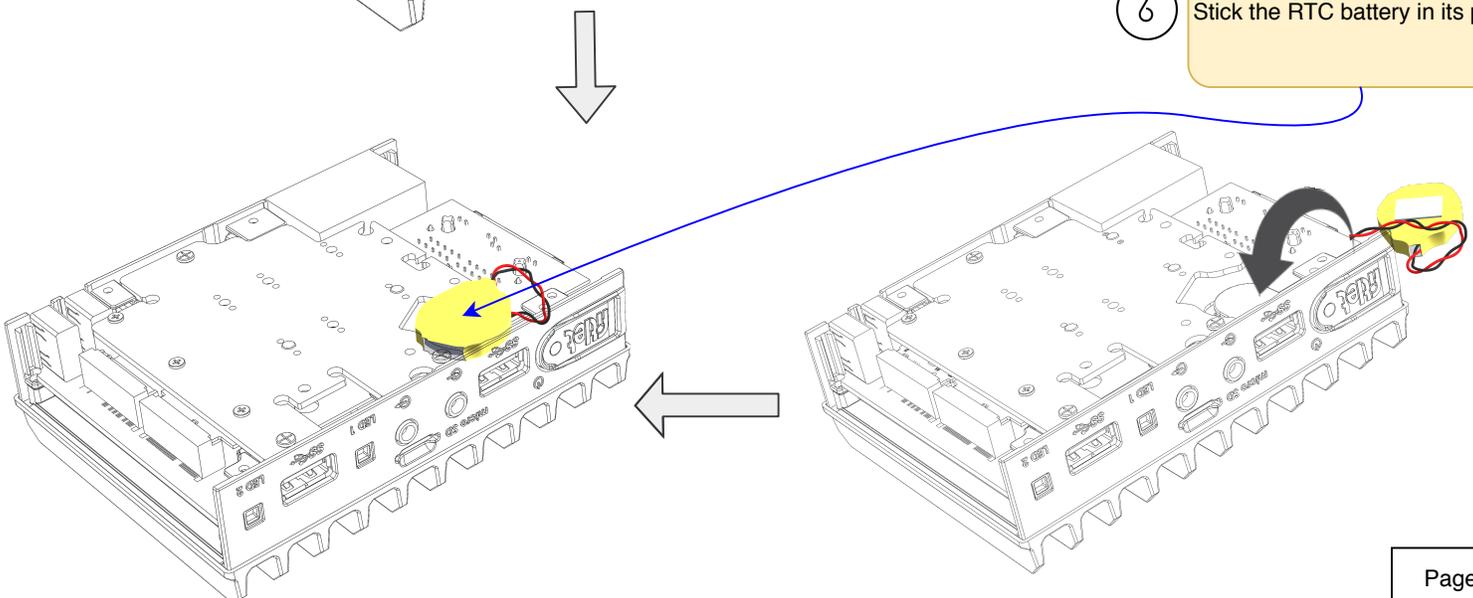


6

Stick the RTC battery in its place

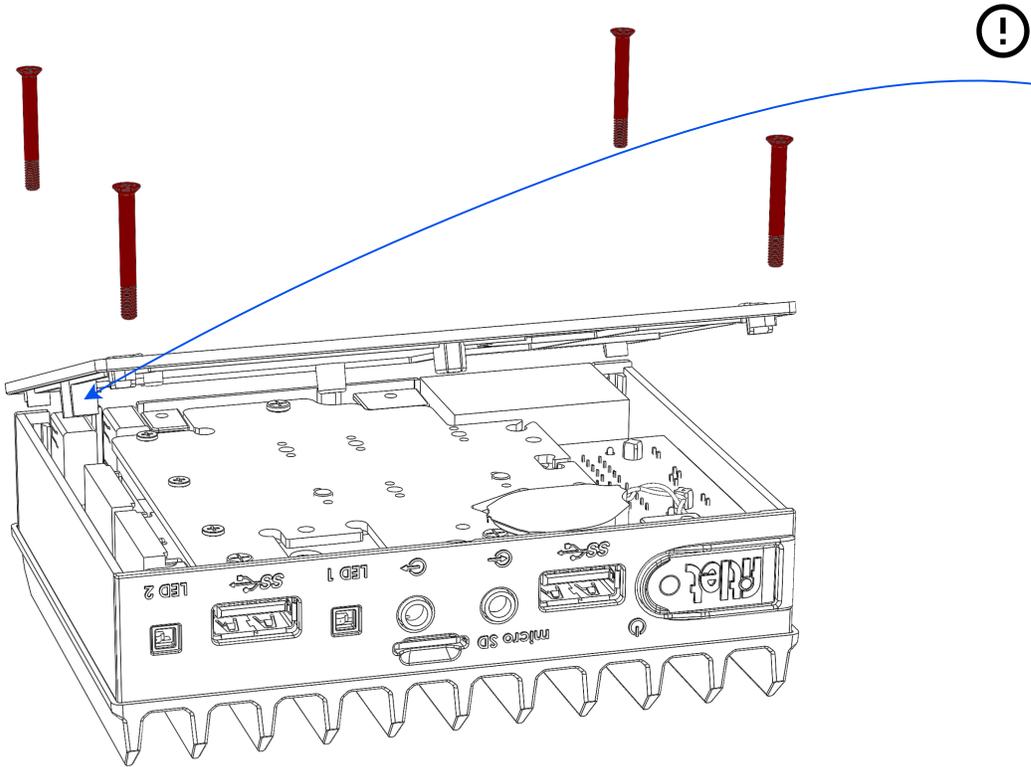

**Note**  
 Before placing the bottom cover, make sure the U-shaped Boss is on the side of the M.2 connectors

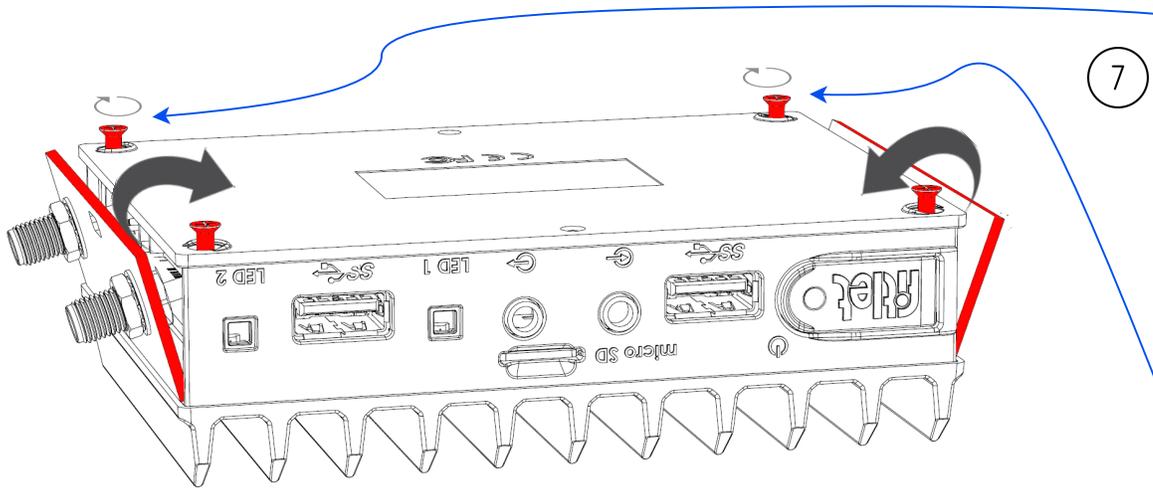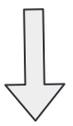

7

Screw the 4x Phillips enclosure screw half way, enough to hold the bottom cover in-place but not too tight

Bring both side panels in place, and hold them

Complete by tightening the Phillips enclosure screws all the way down, while holding the side panels