


fitlet2 FC-OPLN Installation instructions

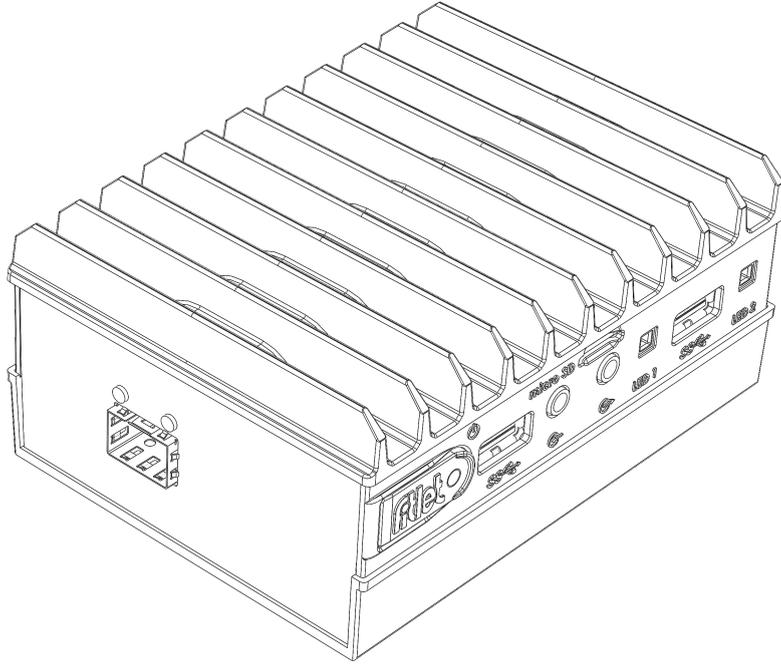

Package content

2x Retaining washer



2x Brass standoff



2x 3mm M3 Phillips screw



1x M3 nut



4x Phillips Chassis screws




1x 8mm M3 Phillips screw




1x Tall side panel




1x SCG tall side panel

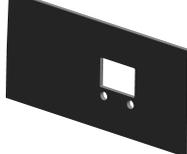


1x FC-OPLN FACET card

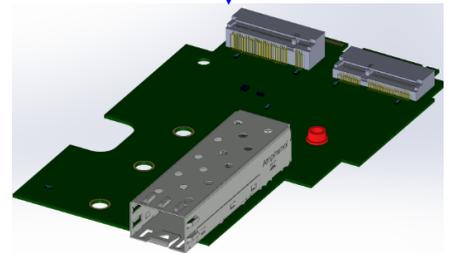


1x Deep bottom cover

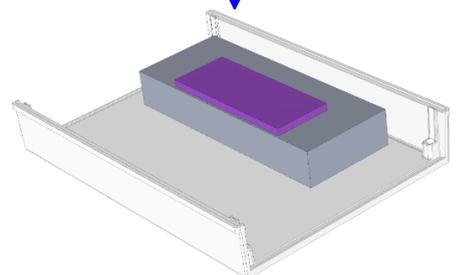

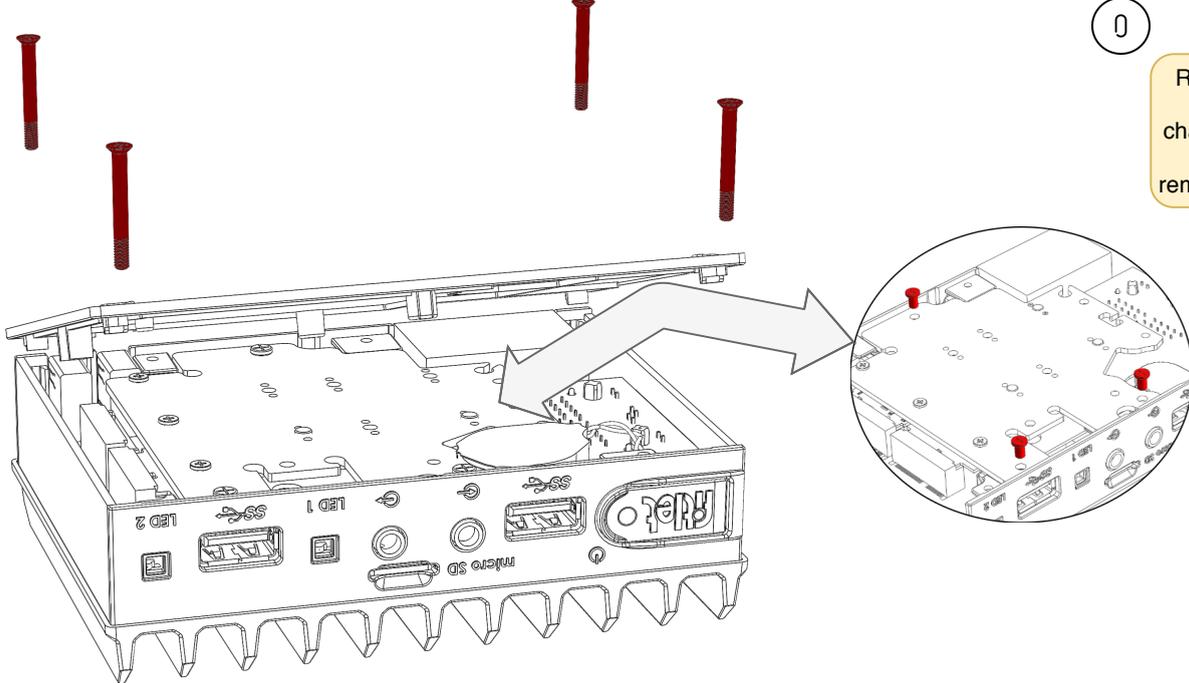


0

Remove the bottom cover by unscrewing the 4x Phillips chassis screws and pull out the cooling plate gently after removing the 3x Phillips screws.

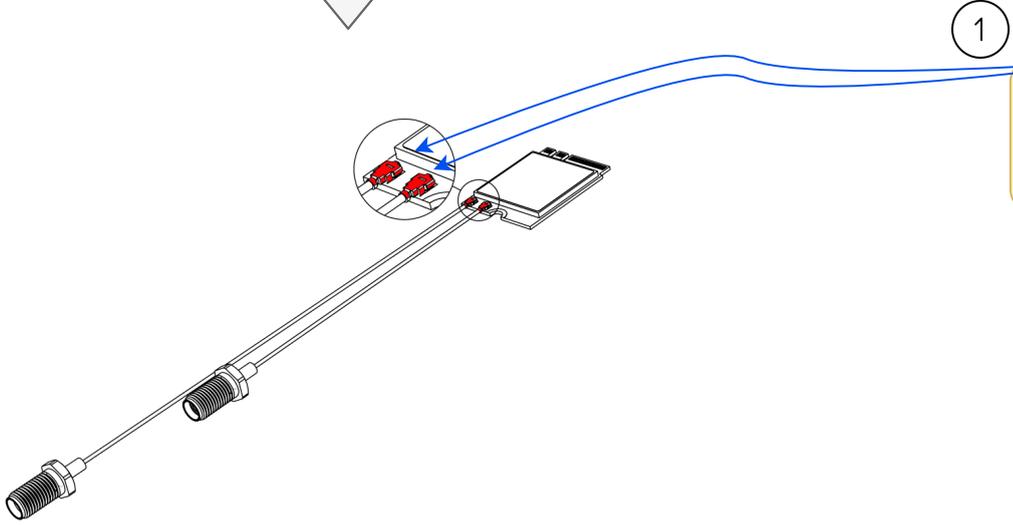


1

Plug the IPX connectors to the Wifi module as follows:
Long cable to port #1
Short cable to port #2

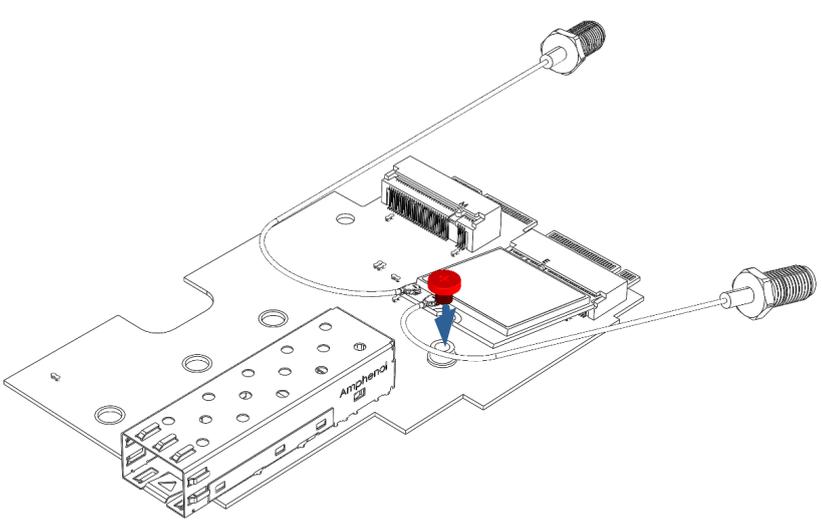

2

Plug the WiFi module into the M.2 Key-E slot and fasten with the 3mm Phillips screw

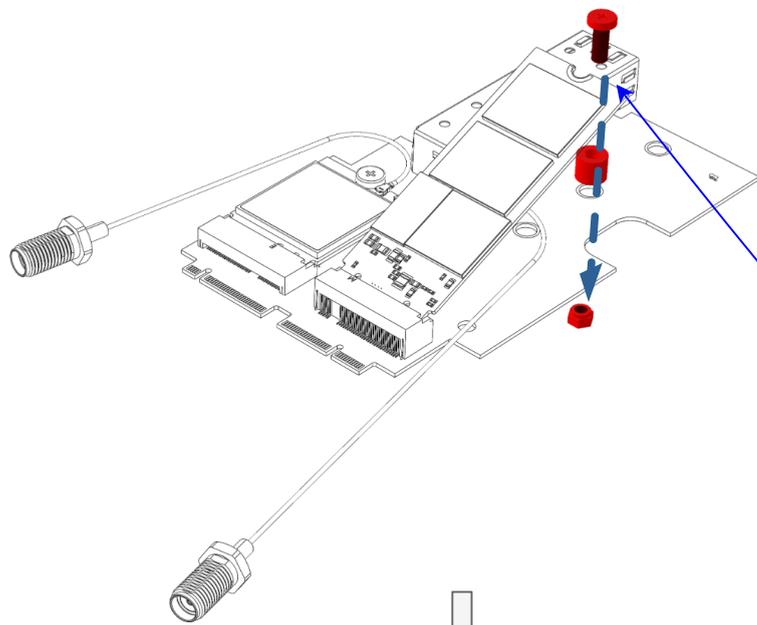


3

Connect the storage module to the M.2 SATA slot on the FACET.

For easier installation, thread 2x retaining washers on the 8mm Phillips screw and screw using the hex nut from the other side.

The storage module should be seated between the retaining washer and the Phillips screw


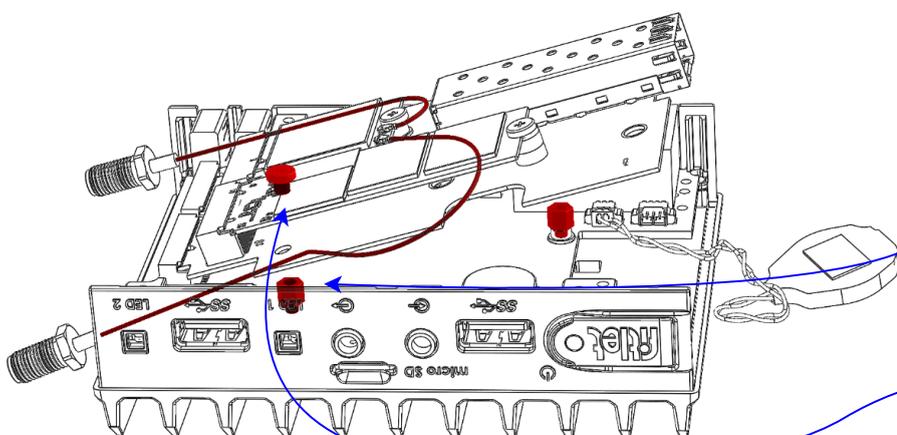


4

Install the FACET into the M.2 connectors and route the SMA antenna cables below the FACET


NOTE: When seating the FACET make sure the SMA cable is not pinched by the brass standoff

Use the 3mm screw to fasten the FACET to the fitlet2's SBC.

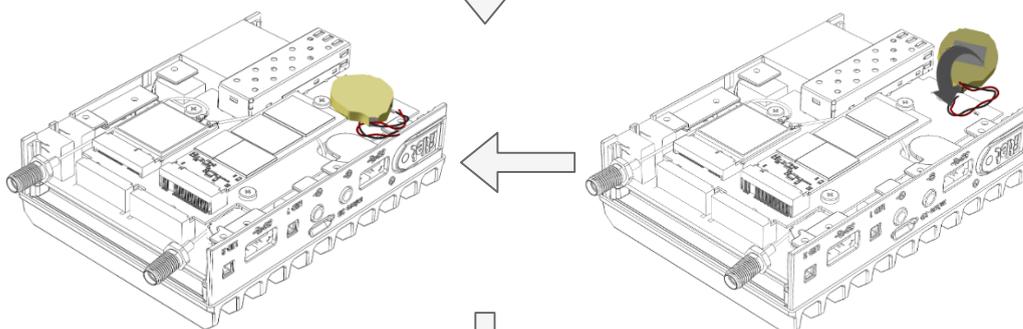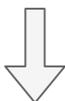

5

Peel the protective tape and stick the RTC backup battery on-top of the FACET

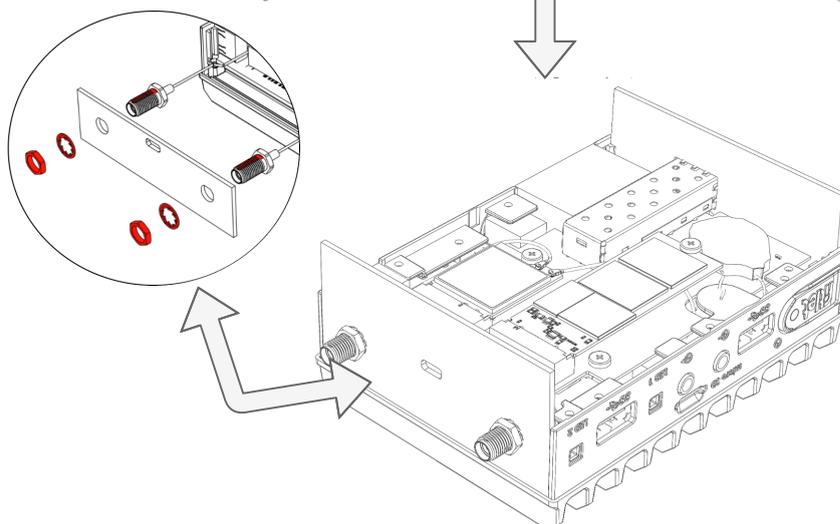

6

Install both tall side panels.

Note: The tall WiFi side panel is supplied separately

7

Peel the protective tape off the thermal pad and install the bottom cover with the supplied Phillips chassis screws.

Hold both tall side panels while screwing the Phillips screws

Make sure the heatsink block is aligned with the storage module.

