


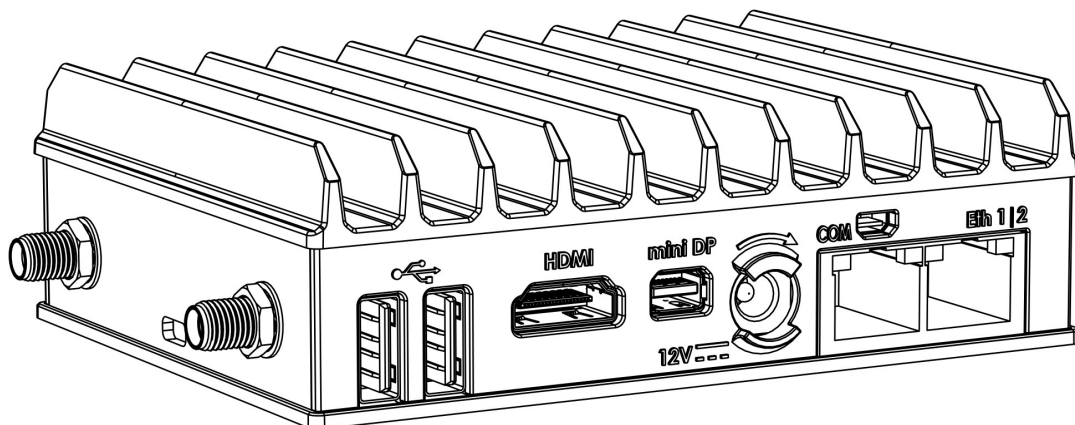


fitlet2 FC-PCI installation instructions

Package Content

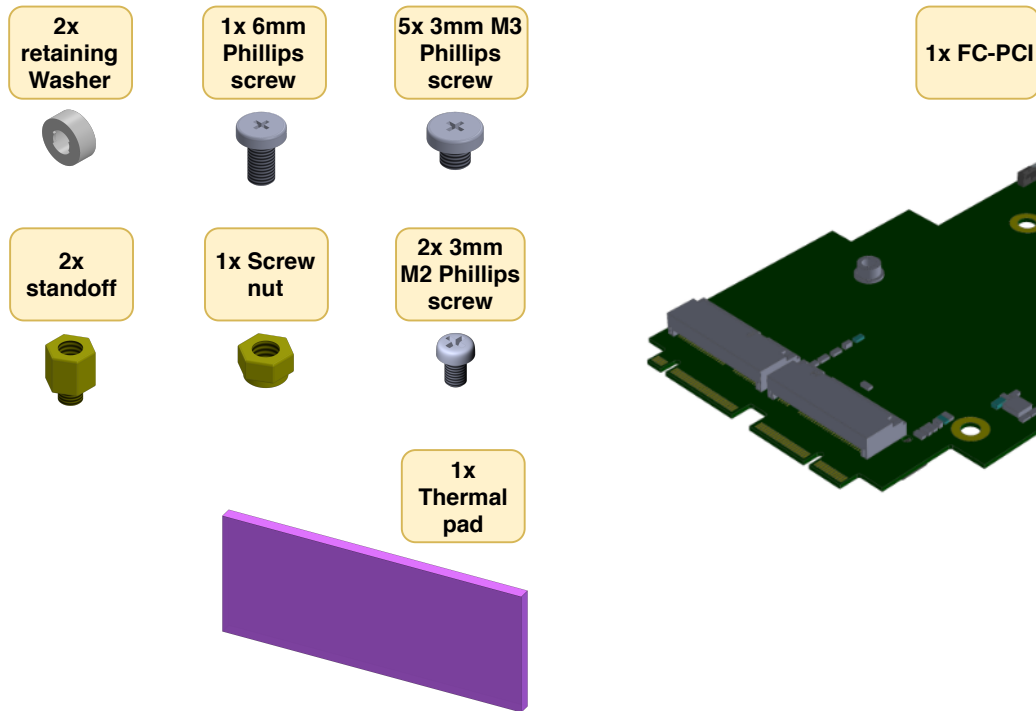

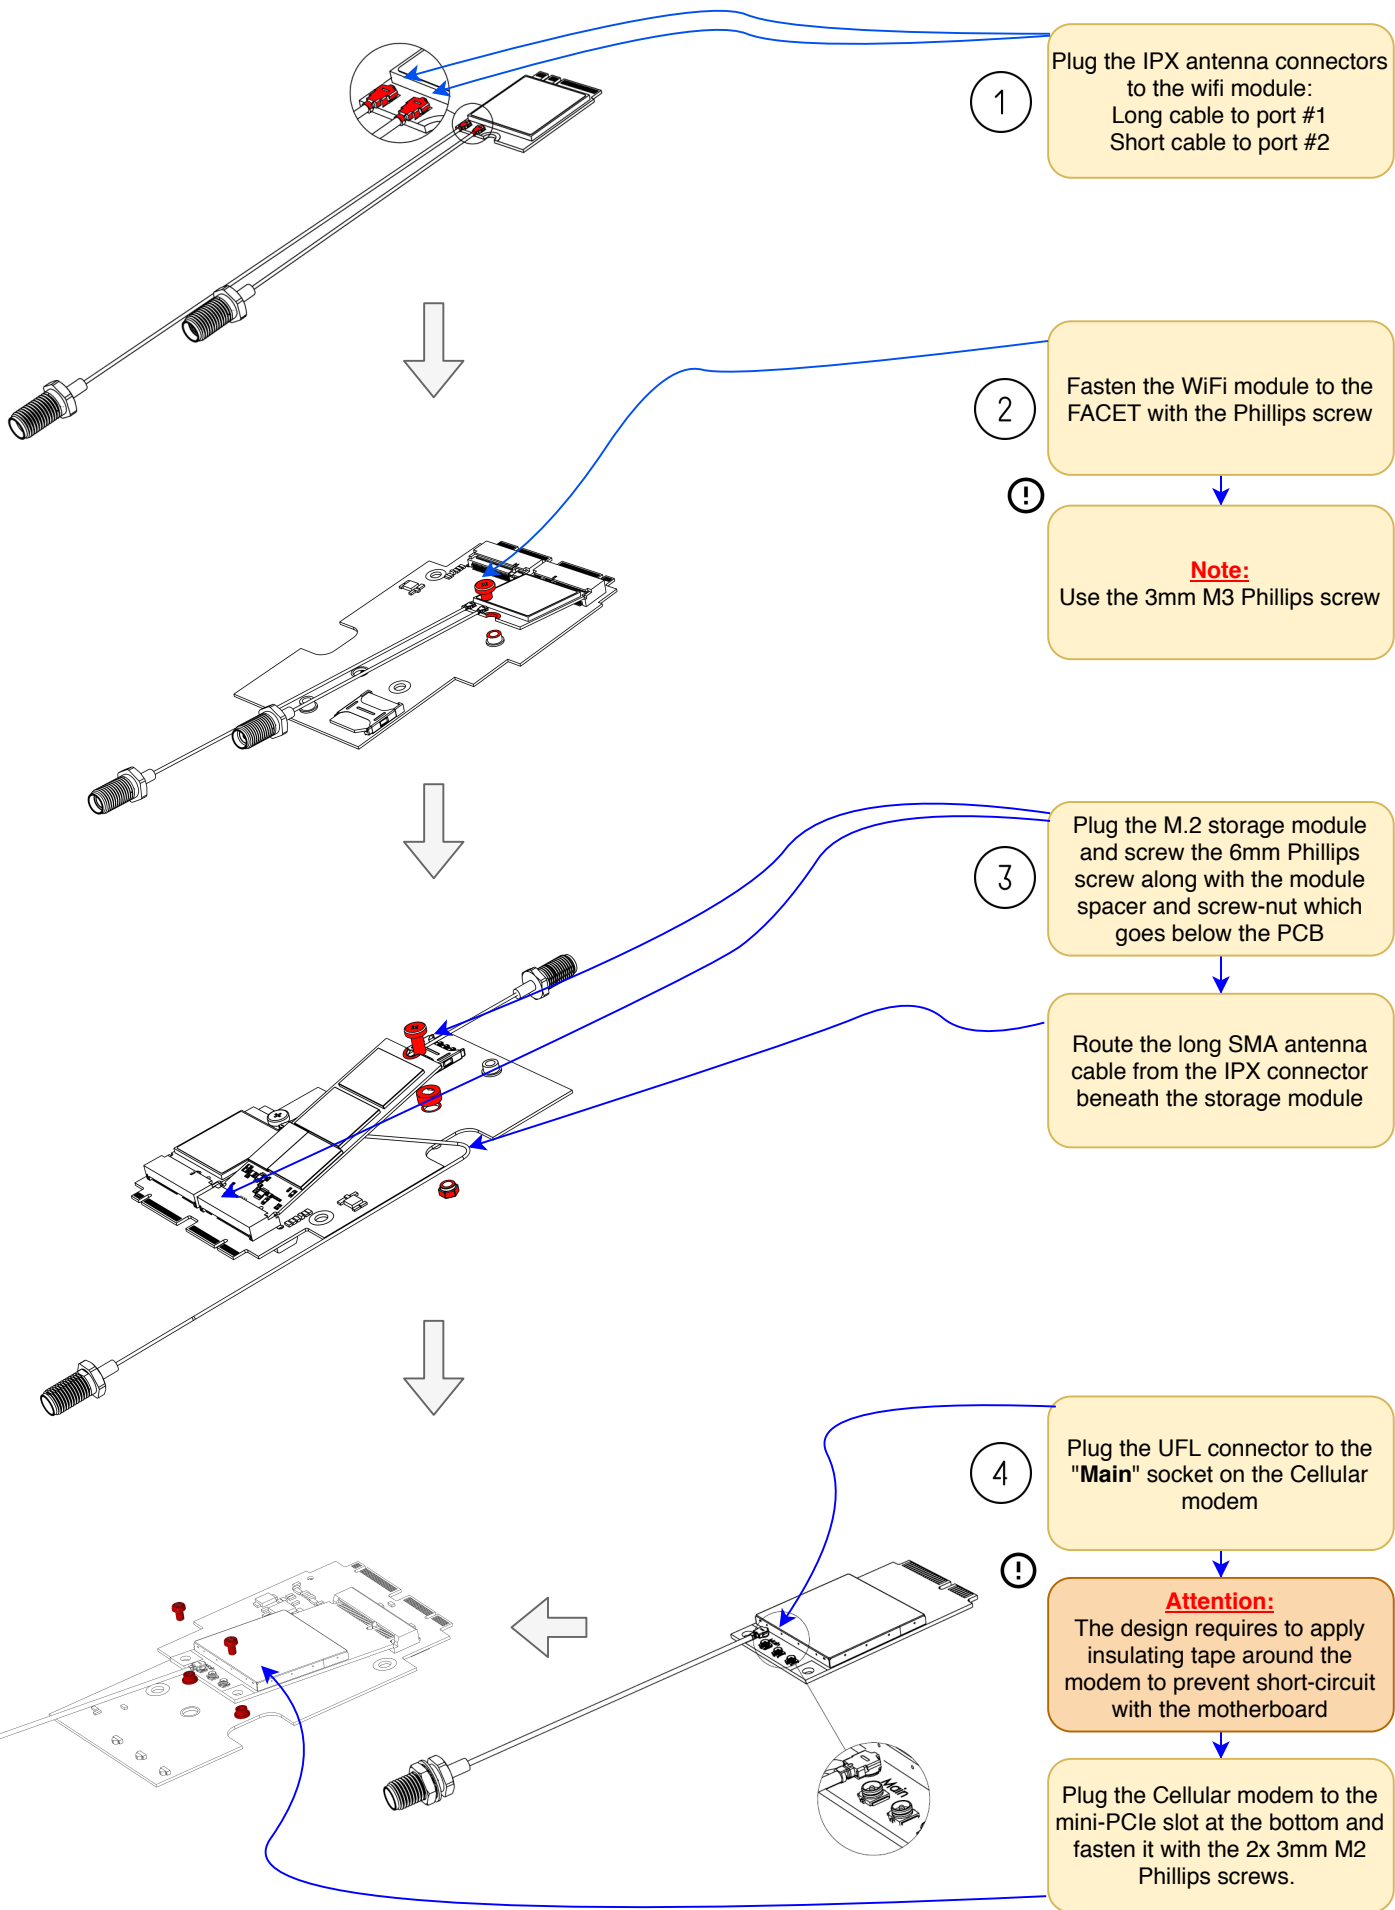

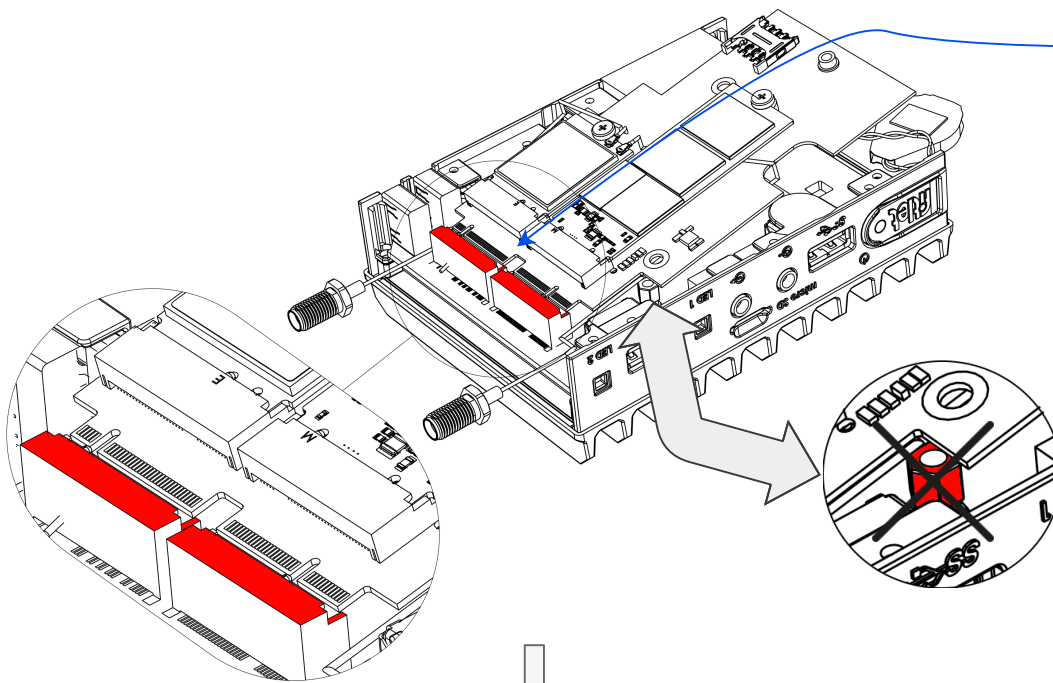


5

Seat the FACET into the M.2 sockets.
Keep it in an angle as the next step explains the SMA antenna cable routing.



Note:

In case a cellular modem has been installed, the standoff adjacent to the USB connector may collide with the modem - **Remove it**

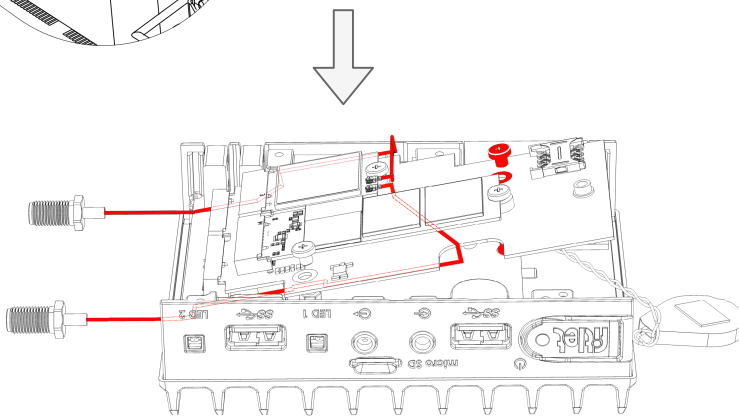

6

Pay attention to the way the antenna cables are routed below the seated FACET.




Note:

In case a cellular modem was not installed, and the standoff haven't been removed, **Pay attention** to the longer cable, it should be routed around the standoff, make sure the FACET doesn't pinch it when pushed down.




Before pushing down the FACET for final assembly, the cables should be free and loose.

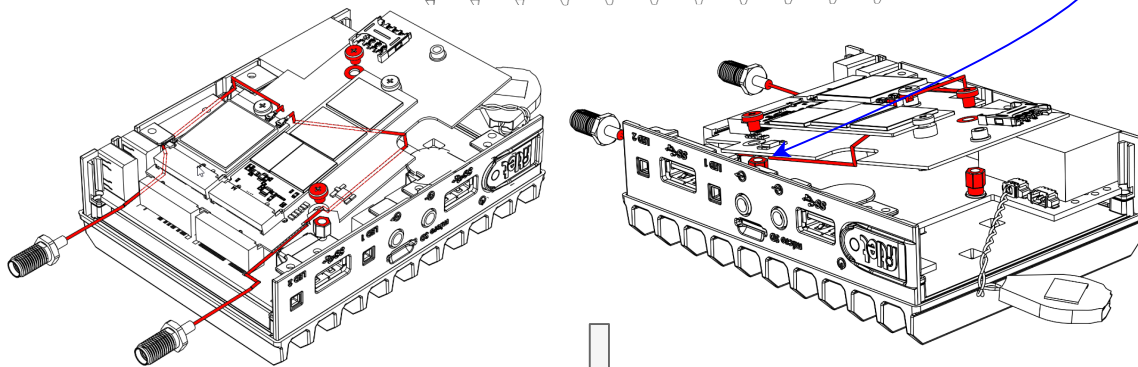


7

Assemble the RP-SMA connector with the Cellular antenna side panel

SIM slot located at the top of the FACET.

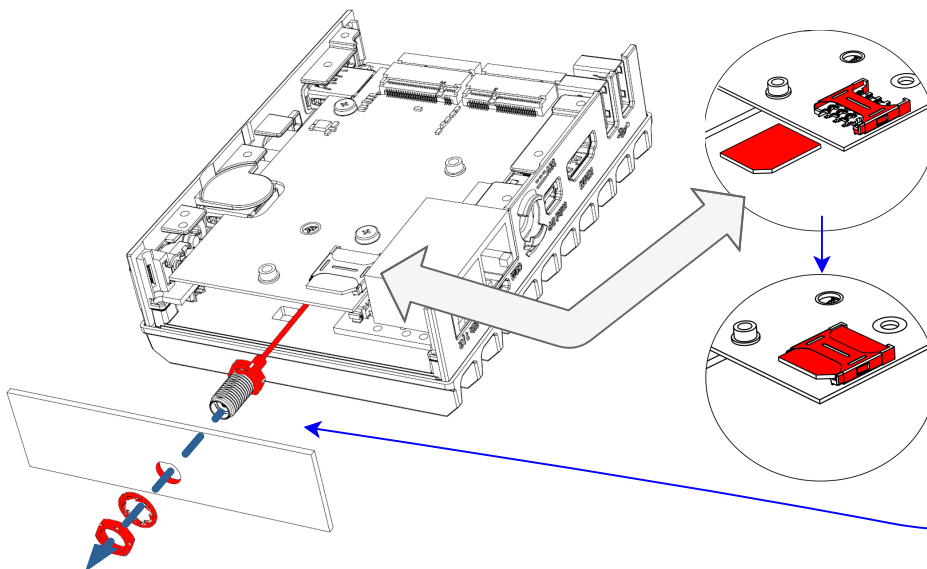


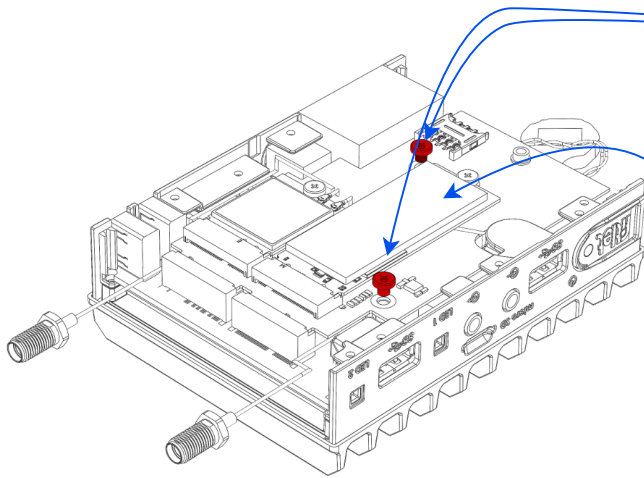


8

Assemble the 2x 3mm Phillips screws at the stand off locations. If the standoff has been removed as per step 5, do not screw at the M.2 connector location.

Apply the thermal pad on-top of the M.2 SSD

Stick the RTC backup battery in its place

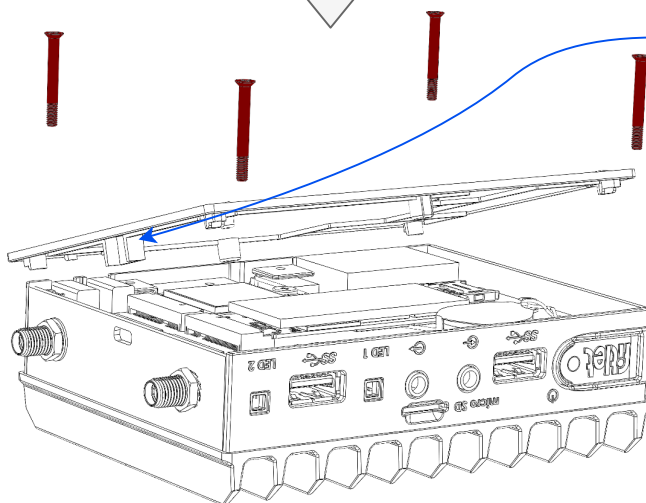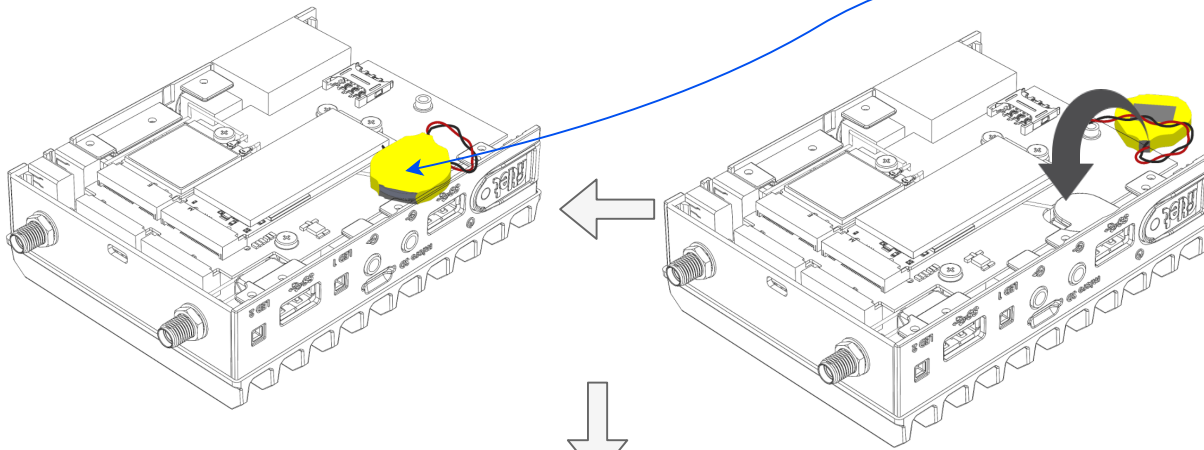

!

Note
Before placing the bottom cover, make sure the U-shaped Boss is on the side of the M.2 connectors

9

Screw the 4x Phillips enclosure screw half way, enough to hold the bottom cover in-place but not too tight

Bring both side panels in place, and hold them

Complete by tightening the Phillips enclosure screws all the way down, while holding the side panels

