




# fitlet2 DIN-rail bottom mounting installation instructions

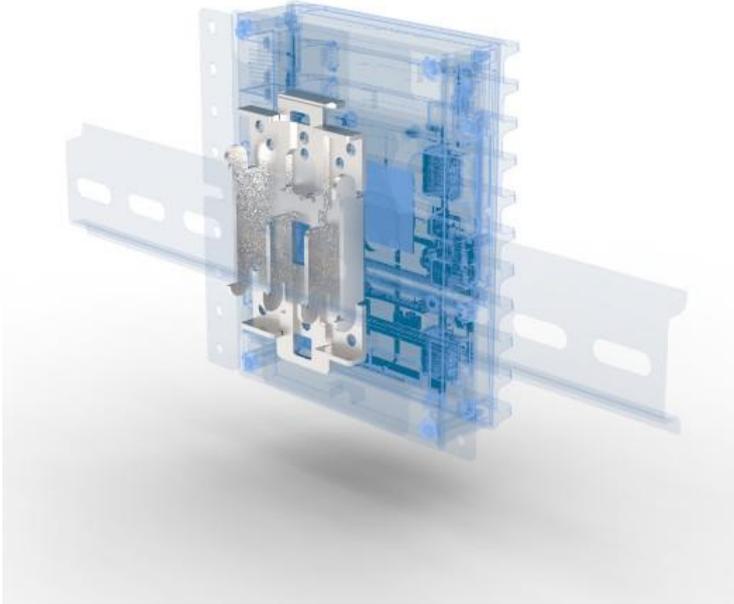


## Package content

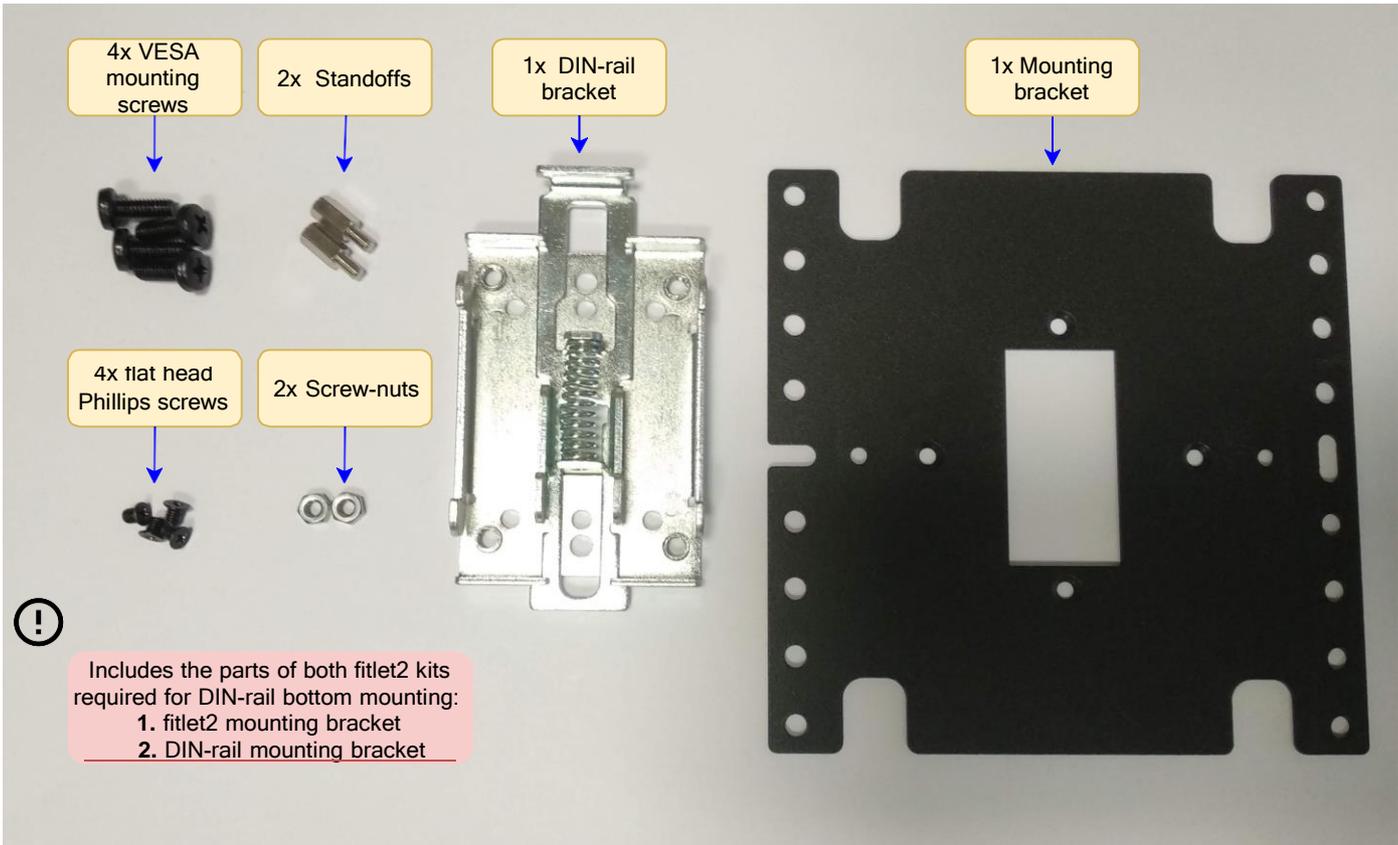

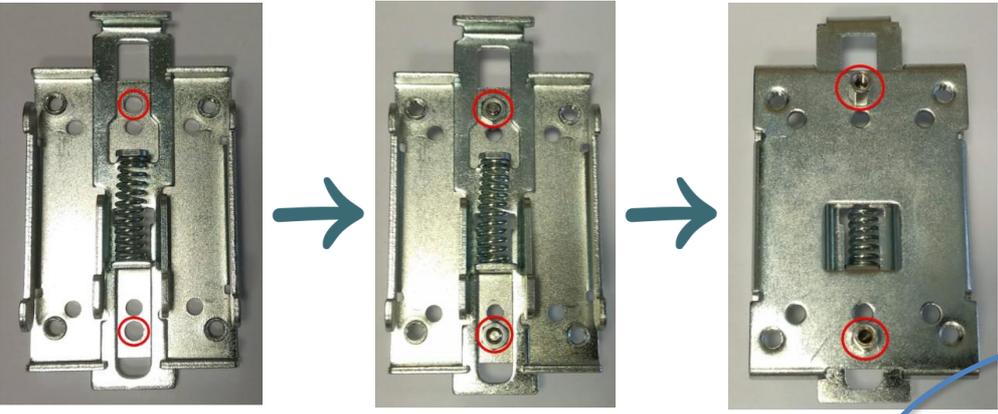

1

Fasten both standoffs to the back of the DIN-rail's designated holes using the screw-nuts.

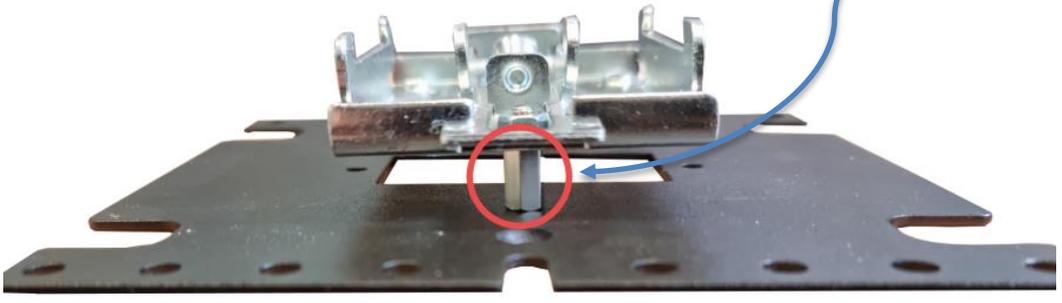


2

The DIN-rail bracket can be installed to the mounting bracket at both horizontal and vertical orientations. Use 2x flat head Phillips screws and fasten through the designated holes (marked in **RED**) to the DIN-rail bracket's standoffs.

! Pay attention to the mounting bracket's holes, the flat head screws should fit perfectly into the countersunk holes; if not, simply flip the bracket.


! If the DIN-rail bracket is not used, ignore Step-2 and install the mounting bracket to the **YELLOW** marked countersunk holes.

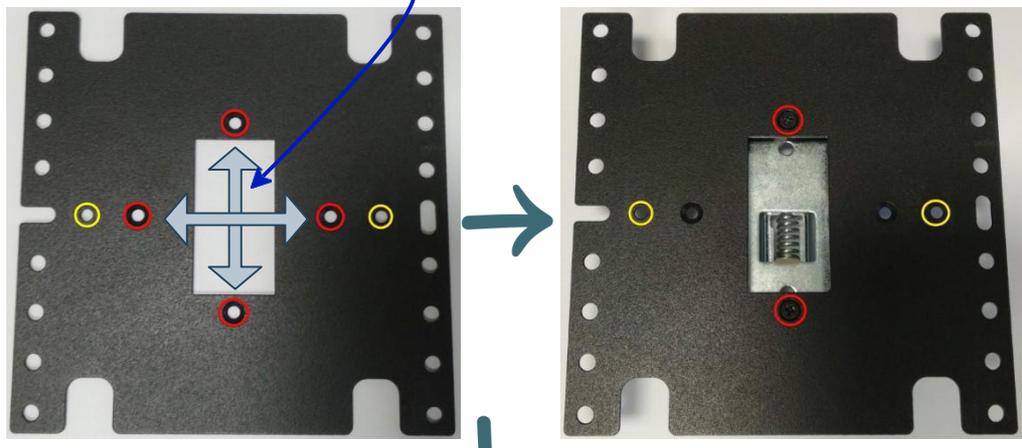

3

Align the mounting bracket's holes with the fitlet2 bottom cover's mounting holes



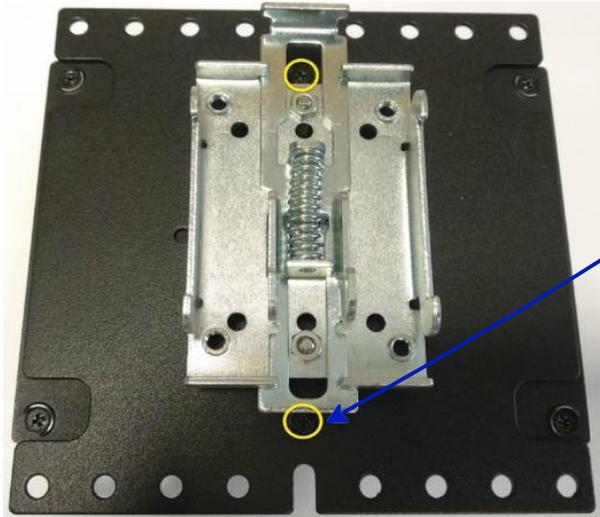

4

Fasten the mounting bracket to the fitlet2 using 2x flat head Phillips screws